

TYPE: LIQUID



FCT Water Treatment

Traceable Active Polymer System Test Kits

Active Polymer Test

Traceable Active Polymer System Test Kits

Ever since polymers have been used as dispersants in cooling water treatment systems, there has been a need for a method of testing the polymer concentration.

The best estimate of the concentration of polymer in the cooling water has been by tracking the "dosed" level, the total amount of polymer added. This method, while good enough for estimating the total polymer in the system, gives no indication as to how much of the polymer is "free," that is, available for prevention of corrosion and fouling, as opposed to already bound by contaminant particles and scale.

FCT Water has made a tremendous advance in this area with the introduction of the Traceable Active Polymer System. Active polymers have a tag permanently attached to the molecule. The tag allows immunoassay reagents to specifically identify the polymers at ppm concentrations without interference from other treatment components or contaminants. A simple and inexpensive strip test is used to determine the amount of free polymer in a cooling water system.

Active Polymer System Benefits

- Rapid, portable, reasonably priced, and easy-to-use strip test
- Direct measurement of free polymer concentration
- Reliable under a variety of conditions
- Non-hazardous test components which may be easily disposed of and recycled after use
- No interference from common water treatment components
- Accurate determination of 2, 5, or 10 ppm free polymer in the field
- Additional precision under controlled laboratory conditions
- Available in affordable 96-test kits

Active Polymer Strip Scanner

The Active Polymer Strip Scanner allows for Quantitative measurement of "free polymer" when using the Active Polymer and Test Strips.

This scanner completes the Active Polymer System, that gives the user an extremely selective, "free polymer" measurement capability from 0.5 ppm to >20 ppm, with NO Interferences.

This innovative scanning tool is available for field use by your technical representatives or operators. The Active Polymer Strip Scanner takes any guesswork out of interpreting results by testors by using an electronic scan instead of visual comparison that effectively reduces experimental error. Total error, including sampling, sample prep, strip development is estimated to be - 15% when using the Active Polymer Strips and Scanner to detect active polymers. Data export capability allows for retention of numeric test results, as well as the scan image, and graphing ability within an Excel™ environment.



System Requirements

- IBM compatible pc with minimum 500mb memory
- 100mb free disk space
- Windows™ operating environment — Windows 2000, Windows XP, or Windows Vista
- USB port

FCT Water Treatment

1309 North 17th Avenue · Greeley, CO 80631
Main (970) 346.8002 · Fax (970) 346.8331 · National (800) 686.6504
www.fctwater.com



FCT Water Treatment

Active Polymer Test Continued...

Active Polymer Strip Scanner Features

- 400 - 600 dpi imaging Increased band resolution
- Data and power via USB
- Data export capability via Excel
- Easy to use
- Electronic Test method instructions
- Base unit is a Business card scanner
- Robust
- Customizable
- Affordably priced

Active Polymer Strip Scanner Benefits

- Clear, sharp color band definition
- Total test error – 15%
- No separate power feed necessary to reader
- Record retention and ability to graph results over time
- Minimal training required
- Simplification of the test method
- Great tool for business card information
- Field friendly tool
- Ability to use your company logo and product name
- Affordable


Free Polymer

The active polymer test was designed to measure the "free" polymer in a cooling water system. Polymeric dispersants have two primary functions in cooling water treatment programs:

- 1) to prevent fouling of heat transfer surfaces by insoluble inorganic particles,
- 2) to minimize corrosion by inhibiting crystal growth and aggregation.

The polymer adsorbs onto the particles to disperse them, or onto crystals to prevent their growth. However, when the polymer is adsorbed, it is no longer free to adsorb onto new potential foulants and more polymer is required. The relationship between free, bound, and total polymer is shown in Figure 1.

Figure 1

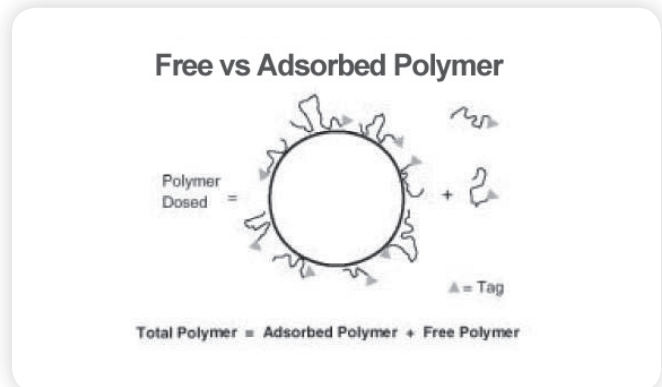

Testing Method

Active polymer testing in the field consists of three simple steps, taking about 15 minutes total. The strip detects discrete polymer concentrations of 2, 5, or 10 ppm free polymer depending on the amount of buffer used. The strip is read by two red bands that indicate whether the polymer level is less than, greater than, or equal to the chosen test concentration. Figure 2 illustrates the test procedure.

FCT Water Treatment

1309 North 17th Avenue · Greeley, CO 80631
Main (970) 346.8002 · Fax (970) 346.8331 · National (800) 686.6504
www.fctwater.com



FCT Water Treatment

Active Polymer Test Continued...



Step 1.

First, 50 µl of water is added to the test tube (100 µl for Active Polymer Test), and then the test tube is filled with buffer solution up to the selected test level line (2, 5, or 10 ppm).



Step 2.

After mixing, 100 µl of the mixture is transferred to the reagent vial and the test strip is placed in the vial. (For Active Polymer Test, wait 5 minutes before placing strip in vial.)




Step 3.

After 10 minutes, the strip is read for the concentration of free polymer above, equal to, or below the selected test level.

The two red bands on the test strip indicate the sample concentration. If the top band is darker, the sample contains free polymer at a concentration greater than the selected test level (2, 5, or 10 ppm). If the bottom band is darker, the sample contains polymer at less than the test level. If the two stripes are of equal intensity, the sample contains polymer equal to the test level. An illustration of test strip results is shown in Figure 3.

Figure 3

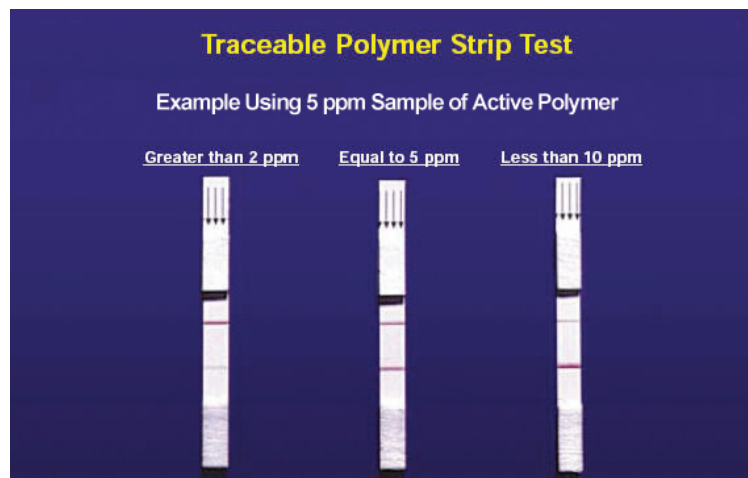

Chosen test level, ppm	2	5	10
Test strip result, ppm	>2	~5	<10
Actual sample concentration, ppm	5	5	5

A one-strip test will give you a pass-fail reading at either 2, 5 or 10 ppm. A two-strip test will bracket your result between two test values. A three-strip test will allow you to determine seven possible levels of concentration. Using the results from all three strips, possible concentrations can be: less than 2, about 2, between 2 and 5, about 5, between 5 and 10, about 10, or greater than 10 ppm.

FCT Water Treatment

1309 North 17th Avenue · Greeley, CO 80631
 Main (970) 346.8002 · Fax (970) 346.8331 · National (800) 686.6504
www.fctwater.com




FCT Water Treatment

Active Polymer Test Continued...

Accuracy of Strip Tests

The detection system for the traceable polymer is based on an extremely sensitive immunoassay technique that uses tagged polymer-specific antibodies with an attached color developing moiety. When the polymer tags and antibodies were originally developed, the results were obtained using a magnetic particle assay technique. The magnetic particle analysis, while extremely accurate, consisted of about thirty steps in the laboratory taking three hours to complete. When the immunoassay technique was adapted to develop the strip test, detailed analyses confirmed that the strip test results were accurate. A graphical comparison of the sample analyses by both methods is shown in Figure 4.

Figure 4

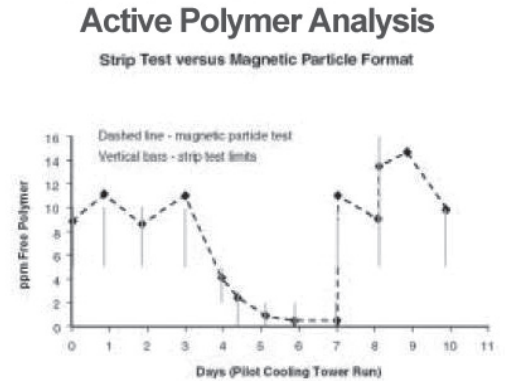

Potential Interferences

Active polymers have been tested for interference from a wide range of common water treatment additives and contaminants. No interference has been found from any of the materials tested. See Table 2 for the results. Active polymer test strips were designed to respond best when used in formulations containing Active polymers available from FCT Water Company.

Table 2 Evaluation of Potential Interferences

Material Tested	PPM Tested	Result
PBTC phosphonate	5	negative
HEDP phosphonate	5	negative
Molybdate	6	negative
Tolytriazole	3	negative
Benzotriazole	3	negative
Humic acid	100	negative
Tannins	20	negative
Lignins	20	negative
Lignosulfonates	20	negative
Hypochlorite	4	negative
Quaternary biocide	30	negative
Isothiazolone biocide	6	negative
Glutaraldehyde	200	negative

FCT Water Treatment

1309 North 17th Avenue · Greeley, CO 80631
Main (970) 346.8002 · Fax (970) 346.8331 · National (800) 686.6504
www.fctwater.com



Active Polymer Test Continued...

Caution

- 1) Temperatures below 32°F (0°C) may cause inaccurate strip test results. Care should be taken to avoid freezing of the test strips and buffer solutions.

Availability:

FCT Water Treatment

1309 North 17th Avenue

Greeley, CO 80631

Main: (970) 346.8002

National: (800) 686.6504

Fax: (970) 346.8331

www.fctwater.com

Material Safety Data Sheets

FCT Water maintains Material Safety Data Sheets (MSDS) on all of its products. These contain important information that you may need to protect your employees and customers against any known health and safety hazards associated with our products. We recommend you obtain copies of MSDS for our products from your local FCT Water technical representative. In addition, we recommend you obtain copies of MSDS from your suppliers of other raw materials used with our product.

Under the OSHA Hazard Communication Standard, workers must have access to and understand MSDS on all hazardous substances to which they are exposed. Thus, it is important that appropriate training and information be provided to all employees and that MSDS be available on any hazardous products in their workplace.

For additional information, a sample, a Material Safety Data Sheet or talk to a technical representative, please call FCT Water.

FCT Water Treatment

1309 North 17th Avenue · Greeley, CO 80631

Main (970) 346.8002 · Fax (970) 346.8331 · National (800) 686.6504

www.fctwater.com



FCT Water Treatment